



CHARGING • AKKU LADEN

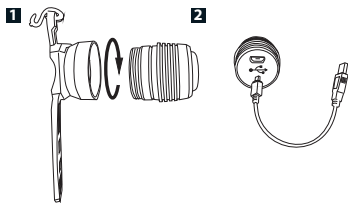

MOUNTING • MONTAGE

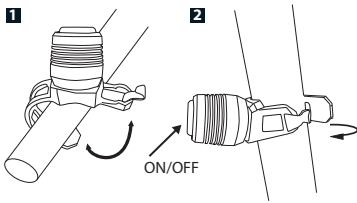

FUNCTIONS • FUNKTIONEN



Attention! Insert correctly (+/-). Do not charge, do not disassemble, do not dispose of in fire, do not short circuit. Keep away from children. Do not use following batteries at the same time: old and new, half full and full, different brands and capacities. Do not charge unsupervised. Batteries may only be replaced by adults. Dispose of defective and empty batteries properly (hazardous waste).

Achtung! Polaritäten (+/-) beachten! Nicht öffnen, nicht ins Feuer werfen oder kurzschließen. Von Kindern fernhalten. Folgende Akkus nicht gleichzeitig verwenden: Alte und neue, halbvolle und volle, verschiedene Marken und Kapazitäten. Nicht unbeaufsichtigt laden. Wechseln der Akkus nur durch Erwachsene. Defekte und leere Akkus ordnungsgemäß entsorgen (Sondermüll).

Keep for future reference!

Anleitung sorgfältig aufbewahren!

distributed by:

messingschlager

Messingschlager GmbH & Co. KG
Hassbergstr. 45 · 96148 Baunach - Germany
info@messingschlager.com
www.messingschlager.com

